

**SELFGUARD Single Phase Generator Control Panel and Auto start Auto Stop Unit with Wireless Remote (GC-1P(W))** is a safety panel for all types of self-start generators.



This Panel covers the safety of both Engine and Alternator and is available in 12 volts.

The 20\*4 LCD display shows the status, warnings and faults of Engine and Alternator while the Generator is running.

Functions
Remote Start – Remote Stop
Remote Start – Auto Stop
Auto Start – Auto Stop

In **Auto mode**, the generator starts automatically after the absence of the main supply and stops automatically after the presence of the main supply.

In **Manual mode**, the generator can be started with the green/start button present on the main unit or the remote unit, and the generator can be stopped by pressing the red/stop button on the main unit or remote unit anytime in the absence of the main supply. The generator will also stop automatically after the presence of the main supply if not stopped with the red/stop button.

In either **Auto or Manual mode**, the unit stops the generator automatically when the main supply is present.

The **Wireless remote** provided with the main unit can be operated from up to 300 feet away from the generator. With the wireless remote, you can remote start(C button) and remote stop(D button) the generator, and the Auto(A button) and Manual(B button) modes can also be changed remotely.

### Features of Panel

#### Display

Auto/Manual Mode – Battery Voltage – Engine Run Time – Service Due Time – Voltage – Frequency – RPM – Amps. – Oil Pressure – Temperature – Fuel Level – Mains Voltage – Fault/ Warning.

#### Warning and Tripping

Low High Battery - Service Due - Over and Under Voltage - Over and under RPM - Over and under Frequency - Over Current trip - Low Oil pressure.

#### Indications

Blink on Waring – Tripping (Fault) – Auto.

**\*All the Features are Configurable by pressing the Menu button on the display.**

\*Connection Diagram is Provided with unit.

\*You can also find the Connection Diagram here: [Selfguard GC-1P\(W\) Connection Diagram](#)

\*Find the Complete range of **Generator Control Panel and Auto start Auto Stop Unit with Remote (GC-P)** here: [Selfguard GC-P All Models](#)