

Item Code: CSNF



| Rating (In Amps.) | 40 Amps. | 63 Amps. | 100 Amps. | 150 Amps. | 200 Amps. |
|--------------------|--------------|-------------|-------------|-------------|-------------|
| SIZE (L*B*H) In mm | 230*170 *115 | 230*170*115 | 300*250*115 | 300*250*115 | 300*250*115 |

SELFGUARD Single Phase Automatic Changeover Switch (CSNF) transfers the load automatically from mains to generator and from generator to mains.

This Unit will be installed between **Single Phase Mains Supply** and **Single-Phase Generator**.

During the absence of Main Supply when the Generator starts, this unit automatically shifts the load to Generator side.

After the Presence of Main Supply, this unit shifts the load from Generator to Mains without any delay and Generator runs on No Load Condition.

The selection of Changeover is done according to the load of Main Supply.

*Find the Connection Diagram here: [Selfguard CSNF Connection Diagram](#)

*Find the Complete range of **Automatic Changeover Switch ((CSNF), (CTF) and (CTSD))** here: [Selfguard Automatic Changeover All Models](#)